

QQ L/H/D connection to the BCM


The complete kit is installed behind the switch to the mirrors as described in this installation guide
You have to pull the BLUE/BLACK and GREEN wire cables through the centre console
and behind the glove box.




First, remove cover, PRISE OPEN FROM BOTTOM **NOT** TOP



Add the Mirror Kit Module plugs like picture shows
you will need to run the **Green** wire and the **Blue/Black** wire across from the driver's side
through the front of the centre consol to where the BCM is behind glove box

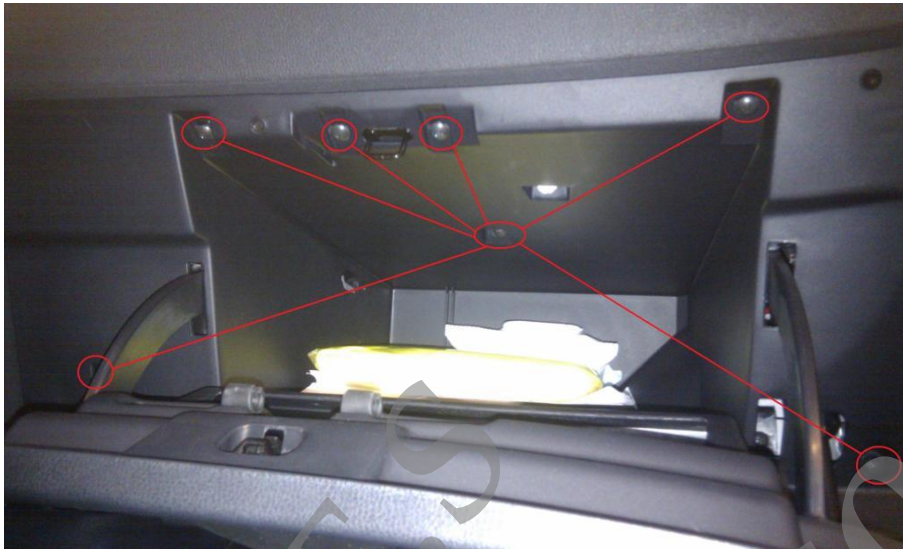


Then removed the glove box, remove these 7 screws

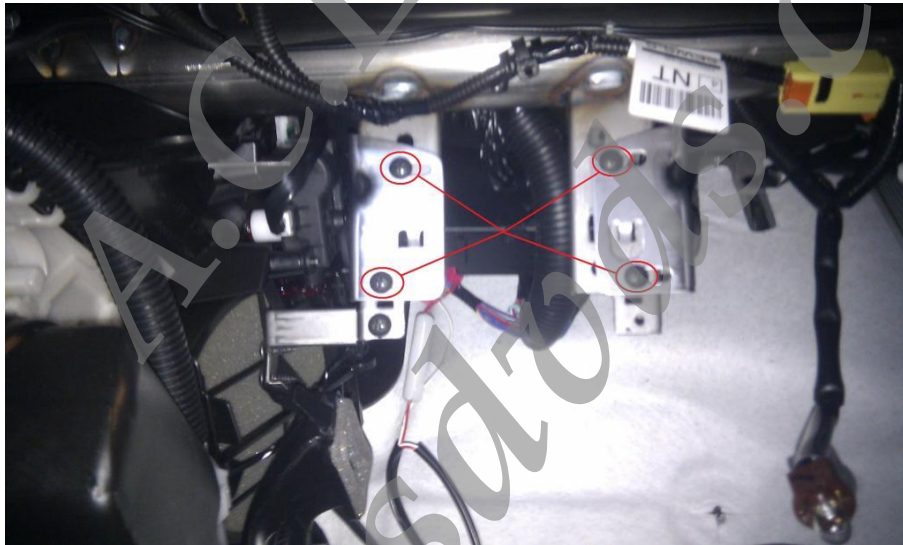

this is the bracket to the BCM, remove these four screws




Then, pull down the BCM. This is the plug you are going to connect to

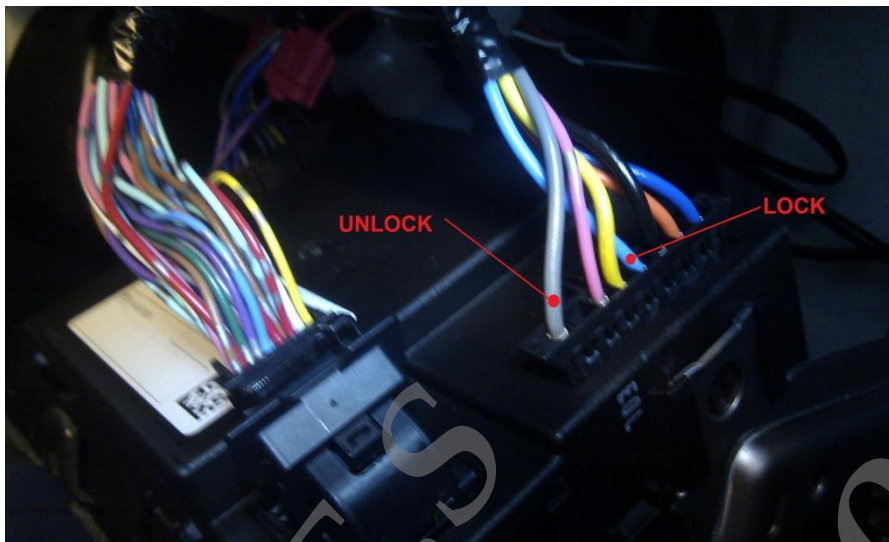

you connect to the **GREEN** to the **GREY** cable and the **BLUE/BLACK** to the **LIGHT BLUE** cable



This is what it should look like when Scotch locks are and fastened
Cut off some of the plastic on **GREEN** and **BLUE/BLACK** wires then fold the copper wire back
so get a good connection inside the scotch locks

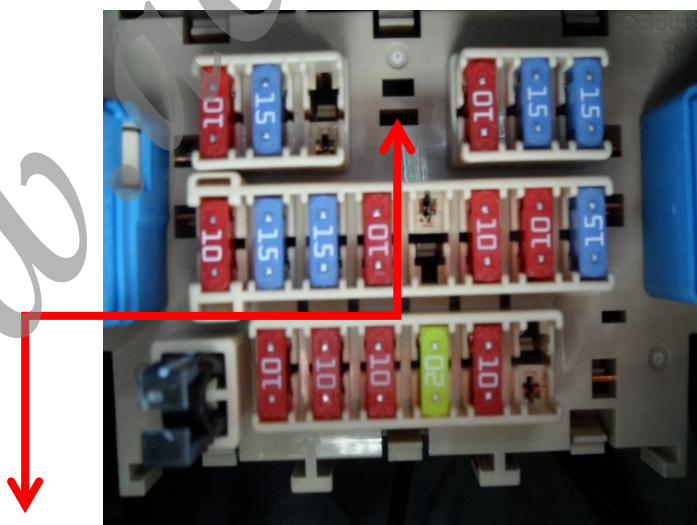

Next you need to make the power connection.

The **red** power lead will connect here.

You can use any of the centre row of fuses there all an ignition live

Copyright©

Audio Car Entertainment Systems

NOT to be circulated anywhere on internet

Kit works better with the **Piggy back fuse holder** which can be found on web site
Gives the live a solid connection in the fuse board



Piggy back fuse holder